




PARTS LIST FOR MODELS BTL7000/BTL8000

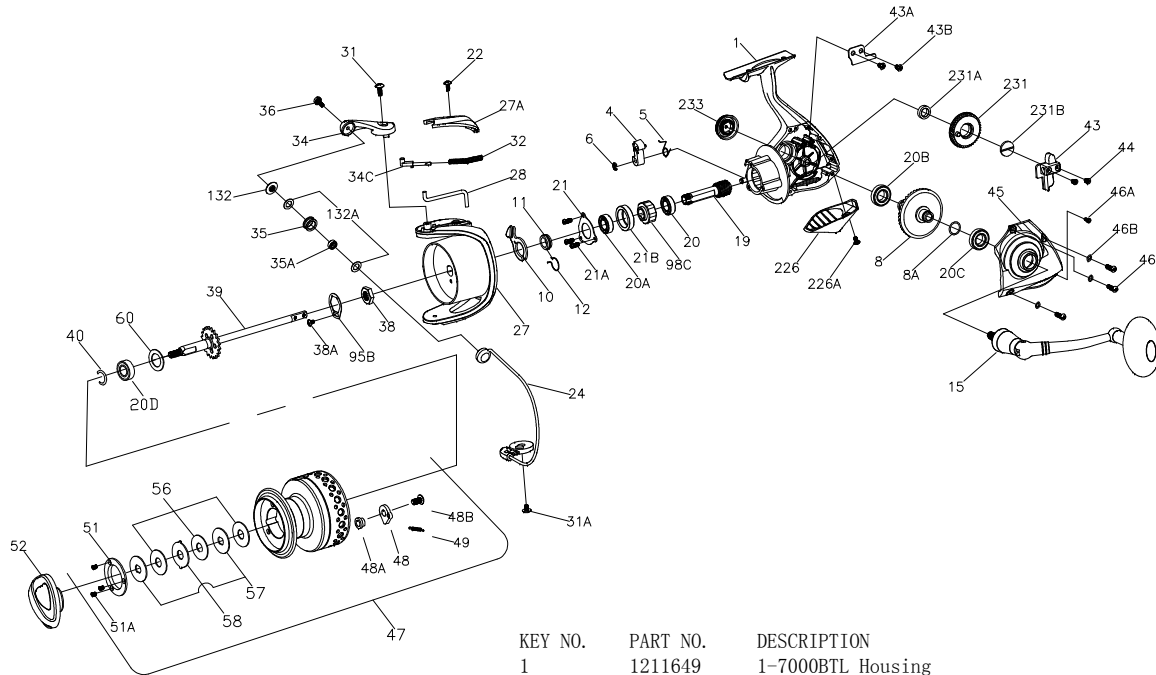

KEY NO.	PART NO.	DESCRIPTION
1	1211649	1-7000BTL Housing
1	1211650	1-8000BTL Housing
4	1190939	4-7000SG A/R Dog
5	1190966	5-5000SG Dog Spring
6	1190979	6-5000SG Retaining Clip
8	1191021	8-7000SG Main Gear
8A	1211632	8A-7000BTL Shim
10	1191068	10-7000SG A/R Holder
11	1191087	11-7000SG Bushing
12	1191090	12-5000SG A/R Bushing Spring
15	1211633	15-7000BTL Handle Assembly
19	1191244	19-7000SG Pinion
20	1192613	20-5000SG Lower Pinion Ball Bearing
20A	1192613	20A-5000SG Upper Pinion Ball Bearing
20B	1192621	20B-7000SG Housing Ball Bearing
20C	1192621	20C-7000SG Housing Cover Ball Bearing
20D	1211610	20D-5000BTL Spool Ball Bearing

KEY NO.	PART NO.	DESCRIPTION
21	1192636	21-5000SG Bearing Retainer
21A	1192645	21A-5000SG Bearing Retainer Screw (3 req)
21B	1192650	21B-5000SG Collar
22	1192662	22-7000SG Bail Pivot Cover Screw
24	1211634	24-7000BTL Bail Wire Assembly
24	1211635	24-8000BTL Bail Wire Assembly
27	1211636	27-7000BTL Rotor (w/weight & screw)
27	1211637	27-8000BTL Rotor (w/weight & screw)
27A	1191454	27A-7000SG Bail Pivot Cover
28	1191491	28-7000SG Trip Lever
28	1191494	28-8000SG Trip Lever
31	1191569	31-5000SG Bail Arm Screw
31A	1191575	31A-5000SG Bail Cam Screw
32	1200520	32-6000SG Bail Spring
34	1191634	34-7000SG Bail Arm
34C	1191656	34C-7000SG Pivot Arm
35	1203991	35-3000PUR Line Roller
35A	1191683	35A-3000SG Line Roller Bearing
36	1191704	36-7000SG Bail Stud Screw
38	1191731	38-7000SG Rotor Nut
38A	1191736	38A-5000SG Rotor Locking Plate Screw
39	1211638	39-7000BTL Spool Shaft Assembly
39	1211639	39-8000BTL Spool Shaft Assembly
40	1211620	40-5000BTL Bearing Locking Spring
43	1191809	43-7000SG Crosswind Block
43A	1191821	43A-7000SG Crosswind Block Plate
43B	1191826	43B-3000SG Crosswind Block Plate Screw (2 req)
44	1191845	44-5000SG Crosswind Block Screw (2 req)
45	1211640	45-7000BTL Housing Cover
46	1191903	46-5000SG Housing Cover Screw (3 req)
46A	1191906	46A-3000SG Housing Cover Screw A
46B	1191908	46B-5000SG Housing Cover Washer (3 req)
47	1211642	47-7000BTL Spool Assembly
47	1211643	47-8000BTL Spool Assembly
48	1211625	48-5000SG Click Tongue
48A	1211626	48A-5000SG Click Tongue Washer
48B	1211612	48B-5000SG Spool Click Screw
49	1211627	49-5000SG Click Tongue Spring
51	1204093	51-7000PUR Retaining Spacer
51A	1191986	51A-3000SG Retaining Screw (3 req)
52	1211644	52-7000BTL Drag Knob Assembly
56	1211645	56-7000BTL Drag Washer (3 req)
57	1211646	57-7000BTL Keyed Washer (2 req)
58	1192055	58-7000SG Earred Washer
60	1211629	60-5000BTL Thrust Washer
95B	1192186	95B-5000SG Rotor Locking Plate
98C	1192215	98C-5000SG Clutch/Sleeve Assembly
132	1192298	132-7000SG Roller Washer
132A	1192302	132A-3000SG Line Roller Washer (2 req)
226	1192463	226-7000SG Rear Cover
226A	1192474	226A-7000SG Rear Cover Screw
231	1192507	231-7000SG Crosswind Gear
231A	1192511	231A-7000SG Bushing Crosswind Gear
231B	1192514	231B-7000SG Screw Crosswind Gear
233	1211631	233-5000BTL Bearing Cover Assembly